

## **For S449 REMOTE MANUAL**

- 1- Open the box containing the receiver.
- 2- On the radio card, hold down the "MEMO" button. A light will come on and flash slowly.
- 3- Keeping it held down, take one of the new remotes and hold down the button to be memorized. The light will go out.
- 4- Release the "MEMO" button and the button on the remote. The light will begin flashing again.
- 5- Press the same button on the remote again. The light will go out to confirm that the remote has been programmed.
- 6- Repeat the process for each button and/or remote you wish to programme.